


Pro. Truse


HANDMADE AMERICAN FURNITURE

HOOPS WALL INSTALLATION GUIDE

(A) Peg



(E) Mirror

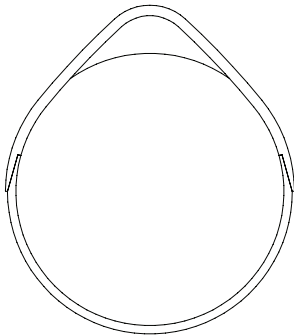


(B) Hanger Bolt



(C) Threaded Rod



(D) Wall Anchor

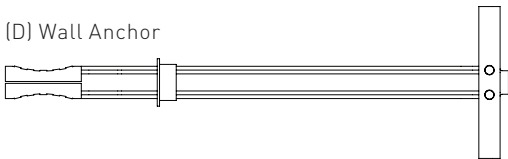


WALL INSTALLATION TO:

STUD

Hardware used: A, B


Drill $\frac{3}{16}$ " pilot hole in wall. Thread together peg (A) and hanger bolt (B). Mount combined pieces (A, B) to wall. Hang mirror (E).

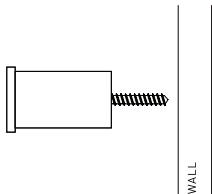

NON-STUD

Hardware used: A, C, D

Drill $\frac{1}{2}$ " hole in wall. Insert wall anchor (D) brass first, adjust to size and secure to wall. Thread together peg (A) and threaded rod (C). Mount combined pieces (A, C) to wall anchor (D). Hang mirror (E).

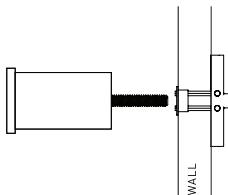

72 Wrights Landing, Auburn, Maine 04210
800.708.9703 | thosmoser.com